edénfantasys





PRODUCT MANUAL

10 massage modes

3 thrusting speeds

Thrusting depth up to 1.75"

Heats up to 113° F

Waterproof IPX6

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge for the sex machine takes up to 3 hours for 2 hours of play.
- Do not use the device while charging.



How To Use

- Hold the 😃 button to turn on/off for standby mode.
- Press the **1** button quickly to cycle through 3 thrusting speeds.
- Hold it to turn the thrusting mode off.
- Press the \checkmark button quickly to cycle through 10 massage modes.
- Hold it to turn the massage mode off.
- Press the U button to turn heating on/off. The LED light will light up.

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.





Cleaning and Care

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352