edénfantasys



PRODUCT MANUAL

20 massage modes

8 intensities

Textured brush head

Waterproof

Made from silicone, ABS plastic and metal

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 2 hours of play.
- Do not use the device while charging.



How To Use

- Hold the 🖒 button to turn on/off.
- Press **W** button to cycle through 20 massage modes.
- Press **IIII** button to cycle through 8 massage intensities.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352