edenfantasys



10 massage modes

App operated

Prostate and scrotum stimulation

Adjustable ring

Waterproof IPX5

 
Made from silicone and ABS plastic

Connection P-spot

PRODUCT MANUAL

Charging

- For maximum pleasure charge before every use.
- Connect to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 120 minutes for 50 minutes of play.
- Do not use the device while charging.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

How To Use

Without remote control

- Apply water-based lubricant on your shaft
- Wear around the penis.
- Hold the 🖰 button to turn on/off.
- Press it quickly to cycle through 10 massage modes.

With the remote control

- Hold the button on the toy for standby mode.
- Press the upper ** button on the remote quickly to cycle through 10 massage modes
- Press the bottom button to return to the previous mode.
- Press the **b** button to pause massage mode.

App operation

 Download the Love Spouse app from Google Play or App Store (the app is free).

QR code:



- Open the app on your phone and accept the User Agreement.
- Log in to your account or register a new one.
- The app will request access to Bluetooth, Camera, Album, and Microphone - please allow access in your phone settings.

App operation

- Tap the + to add a new device this will connect the toy to your phone.
- Scan the QR code of your toy via the app. You can also add your device by entering the product code 0878.

QR code:



- Choose your preferred style of control: personalized or routine.
- Tap the device picture on the app's homepage to begin playing.
- In the "Classic mode" tab, you can select the pattern you like the most.
- Press the **M** to create your own pattern list and choose one to play.
- Enter the "Game mode" tab to enjoy a massage while you play a game. When two of the same fruits in the game touch each other, the toy's vibration activates. The bigger the fruit, the stronger the vibration.
- In "Video mode", you can choose a local video on your phone by tapping the button "Select local video".
 Select the pattern you like the most.
- In the "Musical mode" tab, you can

- sync the music playing on your phone (via any app) with the vibration of the toy. Just tap the "Start listening" button. Please note that you have to be in the "Musical mode" tab in the app for the toy to begin picking up music and activating.
- You can create your own pattern to the rhythm of the music by tapping on ● and begin recording, matching your tapping to the tune. Press the to to delete the recorded pattern. Press start/pause to turn on/pause the recording mode. Press the to save the new pattern.
- In the "Draw something" tab, you can control the toy's vibration by tracing visual drawing lines on the screen.
- You can create your own pattern by tapping on and putting the vibration mode into visuals - dots and lines or whatever else you want to draw to illustrate the desired vibration pattern.
- Press the to delete the recorded mode. Press the start/pause to turn on/pause the recording pattern. Press the to save the new pattern.
- In the "Shake it" tab, you can control the vibration of the toy by shaking your phone in the desired rhythm and potency.
- In the "Interactive mode" tab, you can add contacts to the list of people who will be able to control your toy through the app. Tap + to add a new friend. Please note that your friend needs to also have an account in the app.
- Choose a contact from your contact list to create a playroom. Pick a type of interaction you want: video chat or

- voice chat.
- After you both enter the playroom, the other user will be able to connect to your toy, and you will be able to control their devices. too.
- In the "Classic mode" tab, you may choose a pattern for them.
- In the "Draw something" tab, you can control the vibration of their toy by drawing lines on the screen.
- In the "Shake it" tab, you can control the vibration of their toy by shaking the phone.
- In the "Type what you want to say" field, you can send messages to your contacts during the game.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352