edénfantasys



Deluxe Vibro Nipple Clamps

PRODUCT MANUAL

9 massage modes

Soft and secure clamps

Waterproof IPX6

Made from ABS plastic

Charging

- For maximum pleasure, charge before every use.
- Detach the bottom part of the control pack.
- Insert the USB end into the wall adaptor or computer/power bank USB port (the device must be turned on) to power the control pack.
- A full charge takes up to 70 minutes for 40 minutes of play.



USB charging port

How To Use

- Hold the 😃 button on the control pack to turn the toy on/off.
- Press the **W** button to cycle through 9 massage modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edénfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352