



Double trouble

PRODUCT MANUAL

10 vibration and rotation modes

Turbo mode

Remote control

Realistic design


Strong suction cup

Waterproof IPX7

Made from silicone and ABS plastic

Charging

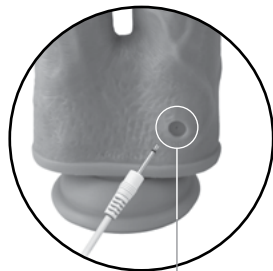

- For maximum pleasure, charge before every use.
- Connect the included USB magnetic charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 120 minutes for 60 minutes of play.
- Do not use the device while charging.






USB
charging port

How To Use

Without remote control

- Hold the  button to turn on/off.
- Press it quickly to cycle through 10 vibration and rotation modes.
- Press the  button for an intensity burst (fades after 10 secs).

With the remote control

- Hold the  button on the base of the toy for standby mode.
- Press the  button on the remote to turn the toy on/off.
- Press it quickly to cycle through 10 massage and rotation modes.
- Press the  button for an intensity burst (fades after 10 secs).



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352