## ed@nfantasys



2 powerful motors

9 rotation modes

9 thrusting modes

9 massage modes

Bendable shaft

Waterproof IPX7

Made from silicone and ABS plastic

#### Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 140 minutes for 70 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

PRODUCT MANUAL

#### How To Use

- Hold the  $\begin{tabular}{c} \begin{tabular}{c} \$
- Press it quickly to cycle through 9 massage modes for the bottom nub and 9 rotation modes for two upper nubs on the clit attachment.
- Press the **W** button to cycle through 9 thrusting modes.



#### **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



### Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

# edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352