ed@nfantasys



7 thrusting modes

7 massage modes

Fantasy design

Remote control

Strong suction cup

Waterproof IPX7

Made from silicone and ABS plastic

How To Use

- For maximum pleasure, charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.

 A full places takes up to 2 because for
- A full charge takes up to 2 hours for 1 hour of play.
- Do not use the device while charging.



USB charging port

PRODUCT MANUAL

How To Use

Without remote control

- Hold the **b** button on the toy to turn on/off.
- Press it quickly to cycle through 7 thrusting and massage modes.



With the remote control

- Hold the **U** button on the toy for standby mode.
- Press the on the remote to cycle through 7 thrusting modes.
- Hold it to turn the thrusting mode off.
- Press the **4** button on the remote to cycle through 7 massage modes.
- Hold it to turn the massage mode off
- Press the button on the remote to turn the toy off.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352