



## Grind Pad

PRODUCT MANUAL

---

**2 powerful motors**

---

**10 massage modes**

---

**4 pulsating modes**

---

**Grinding stimulation**

---

**Remote control**

---

**Waterproof IPX7**

---

**Made from silicone**

## Charging

---

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The glow indicates charging in progress.
- A full charge takes up to 60 minutes for 50 minutes of play.
- Do not use the device while charging.





Magnetic USB charging port



## How To Use

---

### Without remote control

- Hold the  button to turn the toy on/off.
- Click it quickly to cycle through the 4 pulsating modes.
- Click the  button quickly to cycle through the 10 massage modes.
- Hold it to activate the standby mode.

### With remote control

- Hold the  button on the toy to activate the standby mode.
- Click the  button on the remote quickly to cycle through the 10 massage modes.
- Hold it to turn the massage and pulsating modes on/off simultaneously.
- Click it quickly to cycle through the 10 massage and 4 pulsating modes.



## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

**eden**fantasys  
THE NEW INTIMACY

[www.edenfantasys.com](http://www.edenfantasys.com)

Customer Service  
10 AM - 7 PM EST  
Phone: +1 (770) 604 - 1352