edenfantasys



9 flapping tongue modes

9 massage modes

App operated

Remote controlled

Strong suction cup

Waterproof

 
Made from silicone and ABS plastic

Mr. Wonderful

PRODUCT MANUAL

Charging

- For maximum pleasure, charge before every use.
- Connect the toy to the included magnetic charging base and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on)
- The intermittent glow indicates that charging is in progress.
- A full charge takes up to 2 hours for 1 hour of play.
- Do not use the device while charging.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

How To Use

Without remote control

- Hold the **b** button on the toy to turn on/off
- Press it quickly to cycle through 9 massage modes.
- Press the button quickly to cycle through 9 flapping modes.

With the remote control

- Hold the button on the toy to enter the standby mode.
- Press the button on the remote quickly to cycle through 9 flapping modes.
- Hold it to turn flapping mode off.
- Press the button on the remote quickly to cycle through 9 massage modes.
- Hold the **b** button on the remote to turn the toy off.

App operation

 Download the Love Spouse app from Google Play or App Store (the app is free).

QR code:



- Open the app on your phone and accept the User Agreement.
- Log in to your account or register a new one.
- The app will request access to the following: Bluetooth, Camera, Album, and Microphone - please allow access in your phone Settings.

App operation

- Tap the + to add a new device aka to connect the toy to your phone.
- Scan the QR code of your toy via the app. You can also add your device by entering the product code "1415".



- Choose your preferred style of control: personalized or routine.
- Tap on the device on the app's homepage to begin playing.
- In the "Classic mode" tab, select the pattern you like the most.
- You can create your own pattern by tapping on and recording a new one by tapping in your preferred rhythm.
- Press the red icon to delete the recorded pattern.
- Press start/pause to turn on/pause the recording mode. Press the blue icon to save the new pattern.
- Press the wave icon to enter your own pattern list and choose one to play.
- Enter the "Game mode" tab to enjoy a massage while you play a game.
- When the same fruits in the game touch each other, the vibration of the toy activates. The bigger the fruit, the stronger the vibration.
- In "Video mode", you can choose a local video on your phone by tapping the button "Select local video".
- Select the pattern you like the most.

- In the "Musical mode" tab, you can sync up the music playing on your phone (via any app) and the vibration of the toy. Just tap the "Start listening" button. Please note that you have to be in the "Musical mode" tab in the app for the toy to begin picking up music and activate.
- You can create your own pattern to the rhythm of the music by tapping on ● and begin recording, matching your tapping to the tune. Press the red icon to delete the recorded pattern.
- Press start/pause to turn on/pause the recording mode. Press the blue icon to save the new pattern.
- In the "Draw something" tab, you can control the vibration of the toy by getting visual drawing lines on the screen.
- You can create your own pattern by tapping on ● and putting the vibration mode into visuals - dots and lines or whatever else you want to draw to illustrate the desired vibration modes. Press the red icon to delete the recorded mode. Press the start/ pause to turn on/pause the recording pattern. Press the blue icon to save the new pattern.
- In the "Shake it" tab, you can control the vibration of the toy by shaking your phone in the desired rhythm and potency.
- In the "Interactive mode" tab, you can add contacts to the list of people who will be able to control your toy through the app. Tap + to add a new friend.
- Choose a contact from your contact list to create a playroom. Pick a type

- of interaction you want: video chat or voice chat.
- After you both enter the playroom, the other user will be able to connect to your toy, and you will be able to control their devices, too.
- In the "Classic mode" tab, you may choose a pattern for them.
- In the "Draw something" tab, you can control the vibration of their toy by drawing lines on the screen.
- In the "Shake it" tab, you can control the vibration of their toy by shaking the phone.
- You can send messages to your contact during the game in the "Type what you want to say" field.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352