



O-Flexer

PRODUCT MANUAL

9 vibration modes

2 independent motors

Realistic design

Waterproof

Made from Silicone




Charging

- For maximum pleasure, charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1.5 hours of play.
- Do not use the device while charging.



USB
charging port

How To Use

- Hold the  button to turn on/off.
- Press the  button quickly to cycle through 9 vibration modes for upper shaft.
- Press the  button quickly to cycle through 9 vibration modes for the lower shaft.



Power
button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service 24/7
Phone: +1 (770) 604 - 1352