edenfantasys



Rose finger pump

PRODUCT MANUAL

Sucking mode

4 finger motion modes


2 removable suction cups

2 independent motors

Made from silicone and ABS plastic

How To Use

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
 The glow indicates charging in progress.
- A full charge takes up to 120 minutes for 60 minutes of play.
- Do not use the device while charging.

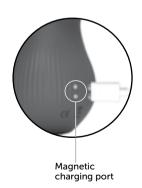

How To Use

- Put the cup attachment.
- Press the toy to your labia or nipple so the sucking cup surrounds the desired area.
- Hold the **b** button on the toy to turn the toy on/off.



Power button

Suction Mode

- Hold the button to activate the suction mode - a gentle tugging sensation should appear.
- When you feel the suction intensity is enough, release the suction button.
- Hold the button to increase suction intensity.
- Press the 6 button to activate the suck-and-release mode.
- Hold it to turn the suck-and-release mode off.

Fingers motion mode

 Press the button quickly to cycle through 10 fingers motion modes.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

IF PAIN OR DISCOMFORT OCCURS, IMMEDIATELY RELEASE THE SUCTION BUTTON AND DISCONTINUE USE

edenfantasys

www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352