



10 rotation and massage modes

2 independent motors

Turbo mode

App operated

Strong suction cup

Made from silicone

Sensualist 2.0

PRODUCT MANUAL

Charging

- For maximum pleasure, charge before every use.
- Connect the included USB charging cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on) or power bank.
- The slow, intermittent glow indicates charging in progress.
- A full charge takes up to 90 minutes for 100 minutes of play.
- Do not use the device while charging.





USB charging port

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with water-based lubes only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

How To Use

- Hold the  button to turn on/off. The LED light will flash.
- Press it quickly to cycle through 10 massage and rotation modes.
- Press the  button for an intensity burst (fades after 20 secs).



Power button

App operation

- Download the **Love Spouse app** from Google Play or App Store (the app is free).



QR code:

- Open the app on your phone and accept the User Agreement.
- Log in to your account or register a new one.
- The app will request access to **Bluetooth, Camera, Album, and Microphone** - please allow access in your phone settings.

App operation

- Tap the **+** to add a new device - this will connect the toy to your phone.
- Scan the QR code of your toy via the app. You can also add your device by entering the product code **9041**.

QR code:



- Choose your preferred style of control: personalized or routine.
- Tap the device picture on the app's homepage to begin playing.
- In the **"Classic mode"** tab, you can select the pattern you like the most.
- You can create your own pattern by tapping on **●** and recording a new one by tapping the screen in your preferred rhythm. Press the **🗑️** to delete the recorded pattern. Press **start/pause** to turn on/pause the recording mode. Press the **📁** to save the new pattern.
- Press the **🎵** to create your own pattern list and choose one to play.
- Enter the **"Game mode"** tab to enjoy a massage while you play a game. When two of the same fruits in the game touch each other, the toy's vibration activates. The bigger the fruit, the stronger the vibration.
- In **"Video mode"**, you can choose a local video on your phone by tapping the button **"Select local video"**. Select the pattern you like the most.
- In the **"Musical mode"** tab, you can

- sync the music playing on your phone (via any app) with the vibration of the toy. Just tap the **"Start listening"** button. Please note that you have to be in the **"Musical mode"** tab in the app for the toy to begin picking up music and activating.
- You can create your own pattern to the rhythm of the music by tapping on **●** and begin recording, matching your tapping to the tune. Press the **🗑️** to delete the recorded pattern. Press **start/pause** to turn on/pause the recording mode. Press the **📁** to save the new pattern.
- In the "Draw something" tab, you can control the toy's vibration by tracing visual drawing lines on the screen.
- You can create your own pattern by tapping on **●** and putting the vibration mode into visuals - dots and lines or whatever else you want to draw to illustrate the desired vibration pattern.
- Press the **🗑️** to delete the recorded mode. Press the **start/pause** to turn on/pause the recording pattern. Press the **📁** to save the new pattern.
- In the **"Shake it"** tab, you can control the vibration of the toy by shaking your phone in the desired rhythm and potency.
- In the **"Interactive mode"** tab, you can add contacts to the list of people who will be able to control your toy through the app. Tap **+** to add a new friend. Please note that your friend needs to also have an account in the app.
- Choose a contact from your contact list to create a playroom. Pick a type of interaction you want: video chat or voice chat.

- After you both enter the playroom, the other user will be able to connect to your toy, and you will be able to control their devices, too.
- In the **"Classic mode"** tab, you may choose a pattern for them.
- In the **"Draw something"** tab, you can control the vibration of their toy by drawing lines on the screen.
- In the **"Shake it"** tab, you can control the vibration of their toy by shaking the phone.
- In the **"Type what you want to say"** field, you can send messages to your contacts during the game.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352