



Sleek power wand

PRODUCT MANUAL

20 vibration modes

8 vibration intensities

Memory function

Flexible head

Waterproof

**Made from silicone
and ABS plastic**




Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.



Magnetic
charging port

How To Use

- Hold the  button to turn on/off.
- Press the  button to cycle through 20 vibration modes.
- Press the  button to cycle through 8 vibration intensities.
- The **Memory function** allows the toy to recall the last mode you used and pick up from it next time.



Power
Button

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352