edenfantasys



Sleek rabbit

PRODUCT MANUAL

10 massage modes

3 sucking modes

2 powerful motors

Waterproof IPX6

Made from silicone and ABS plastic

How To Use

- For maximum pleasure, charge before every use.
- Connect the toy to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
 A full charge takes up to 3 hours for
- A full charge takes up to 3 hours for 1 hour of play.
- Do not use the device while charging.



Magnetic charging port

How To Use

Without remote control

- Hold the button to turn the toy on/off.
- Press it quickly to cycle through 3 sucking modes.
- Double press the button to pause the sucking mode.
- Hold the **W** button to turn the toy on/off.
- Press it quickly to cycle through 10 massage modes.
- Double press the **W** button to pause massage mode.
- The toy will automatically turn off after 10 mins if you don't touch the buttons when in standby mode.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Cleaning and Care

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasys

www.eden fant as ys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352