



Soulmate

PRODUCT MANUAL

9 thrusting and rotating modes

10 air-pulse modes

Strong suction cup

Waterproof IPX7

Made from silicone and ABS plastic



Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor, power bank or computer USB port (Computer must be turned on).
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 80 minutes for 80 minutes of play.
- Do not use the device while charging.



Magnetic USB charging port

How To Use

- Hold the  button to turn the toy on/off.
- Press it quickly to cycle through 9 thrusting and rotating modes.
- Press the  button quickly to cycle through 10 air-pulse modes.
- The toy will automatically enter the standby mode after 20 minutes of inactivity on the buttons. It will then turn off completely after 10 minutes in standby mode.



Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.



Warning

- Do not use on inflamed and/or injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes and/or use that has an adverse effect on any function of the body is prohibited.

edenfantasy
THE NEW INTIMACY

www.edenfantasy.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352