



6 thrusting modes

10 massage modes

3 rotating speeds

Heats up to 86 °F

Removable base

Strong suction cup

Adjustable angle


Made from silicone and ABS plastic

**Thrustworks
system**

PRODUCT MANUAL

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The LED light flashes to indicate the charging process.
- A full charge for the dildo attachment takes up to 3 hours for 1 hour of play.
- A full charge for the base takes up to 2 hours for 1 hour of play.
- Do not use the device while charging.

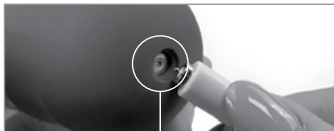

Magnetic USB
charging port



Before Use

- Screw the base of the toy to the suction cup base.




- Attach the suction cup to a smooth horizontal surface.
- Pull the latch down to secure the suction cup.



Suction cup

- Adjust the angle.
- Tighten the knob to hold the position.
- Loosen the knob to change the angle.

Tension knob

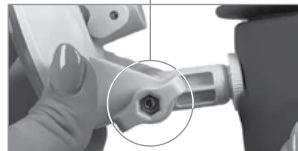

How To Use

Without base

- Hold the right ● metallic button at the bottom of the dildo attachment to turn it on/off.
- Press it quickly to cycle through 3 rotating speeds.
- Press the left ● metallic button quickly to cycle through 10 massage modes.



With base

- Attach the dildo attachment to the base using suction cup.
- Hold the right ● metallic button at the bottom of the dildo attachment to enter the standby mode.
- Hold the ⏻ button on the base of the toy to enter the standby mode.
- Press the 🌀 button on the base quickly to cycle through 10 massage modes.
- Hold it to turn the massage mode off.
- Press the ⬆️ button on the base quickly to cycle through 6 thrusting modes.
- Hold it to turn the thrusting mode off.

- Press the ⏻ button on the base quickly to cycle through 3 rotating speeds.
- Hold it to turn the rotating mode off.
- Press the ⏻ button on the base to turn the heating on/off.
- Hold the ⏻ button on the base to turn the toy off.



Cleaning and Care

- Detach dildo attachment for thorough cleaning.
- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Do not get water inside the sex machine as it is not waterproof. Wipe it down with the wet cloth/tissue and dry it out completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.

edenfantasys
THE NEW INTIMACY

www.edenfantasys.com

Customer Service
10 AM - 7 PM EST
Phone: +1 (770) 604 - 1352