# edenfantasys



Vibro Kegel

PRODUCT MANUAL

# 9 massage modes

Weights 0.42 oz, 2 x 0.77 oz

2 kegel sleeves

Remote control

Waterproof IPX7

Made from silicone and ABS plastic

## **How To Use**

- For maximum pleasure, charge before every use.
- Connect the toy or remote control to the included USB cable and insert the USB end into the wall adaptor or computer USB port (Computer must be turned on).
- The slow, intermittent glow indicates charging in progress.
  A full charge takes up to 30 minutes.
- A full charge takes up to 30 minutes for 60 minutes of play.
- Do not use the device while charging.



### How To Use

#### Without remote control

- Press the **b** button to turn on/off.
- Press it quickly to cycle through 9 massage modes.



#### With the remote control

- Remove the protective film from the remote control's battery compartment before use.
- Hold the **b** button on the toy to enter the standby mode.
- Press the button on the remote to turn it on/off.
- Press the **W** button quickly to cycle through 9 vibration modes.
- Hold the **b** button on the toy to turn it off.



## **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.
- Please avoid contact with silicone or silicone-containing materials as it may damage the product.

## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort
- Adult novelty only. Use for medical purposes or for a use that has an adverse effect on any function of the body is prohibited.



www.edenfantasys.com

Customer Service 10 AM - 7 PM EST Phone: +1 (770) 604 - 1352